

Milk Jug Error Codes Version 3.20

<u>Error</u>	<u>Reason</u>	<u>Halt Game</u>
1	Ticket Error	N
2	Compact Flash Error	N
3	Error Sensor Hole 1	N
4	Error Sensor Hole 2	N
5	Error Sensor Hole 3	N
6	Error Sensor Hole 4	N
7	Error Sensor Hole 5	N
8	Error Sensor Hole 6	N
9	Error Sensor Hole 7	N
10	Error Sensor Hole 8	N
11	Error Sensor Hole 9	N
12	Error Sensor Hole 10	N
13	Error Sensor Hole 11	N
14	Error Sensor Hole 12	N
15	Error Sensor Hole 13	N
16	Error Sensor Hole 14	N
17	Error Sensor Hole 15	N
18	Jug Sensor 1	Y
19	Jug Sensor 2	Y
20	Ball Dispense Sensor Front	Y
21	Ball Dispense Count	N
22	Left Zero Sensor	N
23	Coin 1 Switch stuck	N
24	Coin 2 Switch stuck	N
25	DBV Switch stuck	N
26	- Not Used -	-
27	Cheat Sensor 1 stuck	-
28	Right Zero Sensor	N
29	Program button stuck	N
30	Select button stuck	N
31	Up button stuck	N
32	Down button stuck	N

Upon power up the error codes will cycle for 5 loops displaying any error codes that are currently active. The game will then continue on, unless a Jug error code exists.

**** The high score display will show a 2000 as its current highest score if a error is detected on power up.**

**** A high score of 1050 means the game has just been powered on or has rebooted.**