

QUIK DROP SETUP

The game will arrive on 2 pallets. Please inspect the pallets for shipping damage and report immediately to the freight company if any damage is found.

There will be about 1/2 hour of assembly time needed.

Tools Needed:

1 step ladder (6 foot)
Phillips screwdriver bit

9/16" Wrench
2 Square head screwdriver bit

2 people

Important:

Portions of this game are heavy, bulky and large. Assembly requires 2 people to lift heavy components, and ladders that are tall and strong enough to position components to the top of the game.

From the large pallet, unwrap and unbox the lower cabinet.
Position the lower cabinet in position about 3 feet away from the wall.

Game keys are taped to the Drop Button of the game.
Unlock the back door and remove from cabinet.

To prevent damage to the carousel motor during shipping, bubble wrap has been installed in the back of the game.

The bubble wrap must be removed before turning on game!

Unlock the coin box door and remove hardware kit which is located in the coin box.



The marquee is heavy, bulky and large.
Assembly requires 2 people and ladders that are tall and strong enough to position components to the top of the game.

Carefully lift marquee to the top of the game and position the tube into the white plastic ring mounted to the roof of the game.



QUIK DROP SETUP


Secure the marquee in place by threading 4 bolts (A5BOHH090), 4 lock washers (A5WALO010) and 4 washers (A5WAFL050) up into the marquee. Tighten all 4 bolts using a 9/16" wrench.



A5BOHH090



A5WALO010

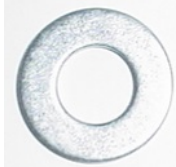

A5WAFL050

Pull the 7 cables down from the marquee into the lower cabinet.



Plug the 7 cables from the marquee into the color coded connectors as shown:

CE5842 power cable to CE5859 - 4 pin flat

CE5841 ribbon cable to board


CE5826 motor cable to CE5827 - Green

CE5853 sensor cable to CE5815 - Red

CE5825 speaker cable to CE5828 - Orange

CE5851 sensor cable to CE5822 - Yellow

CE5858 display cable to CE5838 - Blue

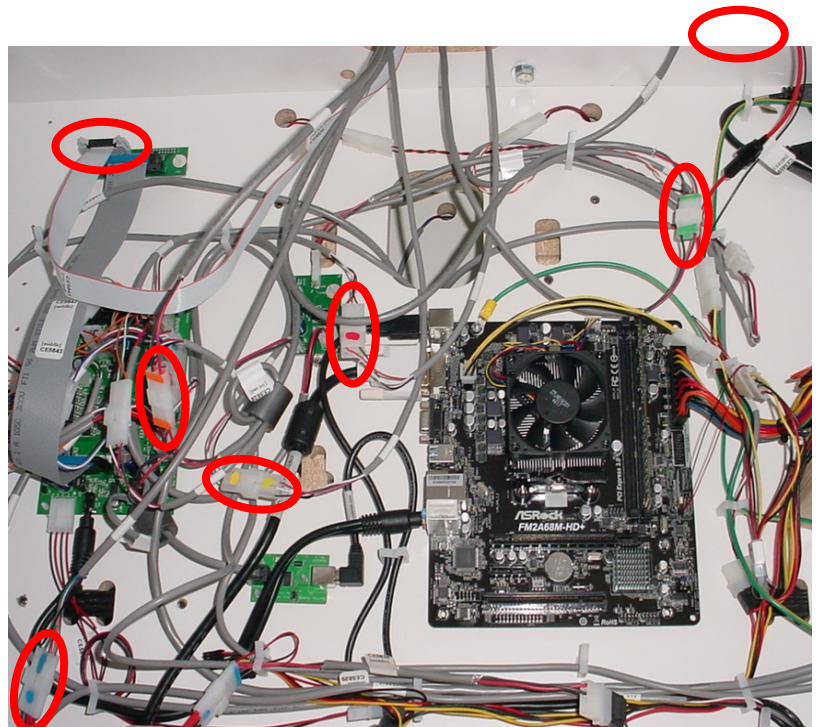

QUIK DROP SETUP

Open the back door of game and remove the upper ball return chute.

Carefully lift upper ball return chute to the top of the game and position into the top of the game and up against the marquee.

Secure the top of ball return chute with 2 of the black 10 screws using a # 2 square bit.



A5SCPH150



Inside the lower cabinet, secure the lower ball return chute by installing 2 of 3/4 " bugle screws using a Phillips screwdriver.



A5SCSQ001

At the top of the game, install 2 of 1" bugle screws using a # 2 square bit



A5SCFH030



Unlock the coin box door and remove power cord from the coin box. Plug one end into the back of the cabinet and the other into the wall.

Open the front door of the cabinet and flip the rocker switch on the power strip to power on game.

You're ready to Quik Drop!

