

WILLY CRASH MINI GAME SETUP

The game will arrive on one pallet. Please inspect the pallet for shipping damage and report immediately to the freight company if any damage is found.

Unbox the pallet and remove the cardboard box from the top of the player console. This is the marquee.

Please unbox the marquee and proceed to assembly instructions.



Tools Needed:

1 step ladder (4-6 foot) # 2 Square bit 7/16" Wrench
9/16" Open End Wrench (to adjust leg levers)

 
Remove the keys from the small plastic bag taped to the top console.



Unlock the front door using a H95 key.



Remove the shipping bolt using a 9/16" wrench.

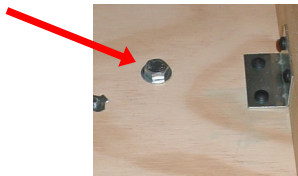

Unlock the coin box door using a E00 key.

Remove the hardware kit from the coin box.
(The power cord is coiled in the rear of the cabinet)

Close and lock coin box door, remove key to allow the front door to close fully.



Unlock and remove the lower back door using a H95 key.

Remove the shipping bolt using a 9/16" wrench.

Route the power cord down through the hole in the bottom of cabinet and out to the back of the game.

Replace the lower back door.

 


WILLY CRASH MINI GAME SETUP

Install marquee by feeding light power cable through the hole in the top of the cabinet as the marquee is placed on top of the game.

Remove the 3 bolts, lock washer, and washers from the hardware kit.

Install from the lower cabinet up into the marquee.

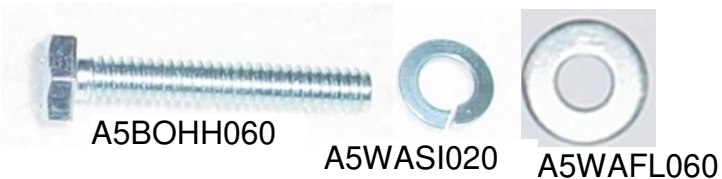

Tighten using a 7/16" wrench.

Plug the 4 pin connector into the game harness.

Peel the protective plastic film from the marquee artwork, and apply the bonus ticket value desired to the white outline as shown.

 
Using a ladder, position the marquee artwork on top of the game and secure using 8 of the black # 2 square drive screws from the hardware kit. (4 per side)



Position game in final position in game room.

Lock wheels to prevent game movement.

Lower 2 front leg levelers using 9/16" wrench to further prevent game movement.

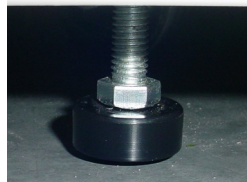

Power on game:

Open the front door and turn on the rocker switch on the power strip along the right side of cabinet..

The rocker switch is located behind the 1st power cord on the strip

The game is now set up and ready for play!

Enter menu to adjust settings to your location specific price per play and ticket payout.

