

WILLY CRASH GAME SETUP

The game will arrive on one pallet. Please inspect the pallet for shipping damage and report immediately to the freight company if any damage is found.




Unbox the pallet and remove the plastic from the top of the player console. This is the marquee.
Please unwrap the marquee and proceed to assembly instructions.

Tools Needed:

1 step ladder (4-6 foot) # 2 Square bit

Remove the keys from the small plastic bag taped to the top console.

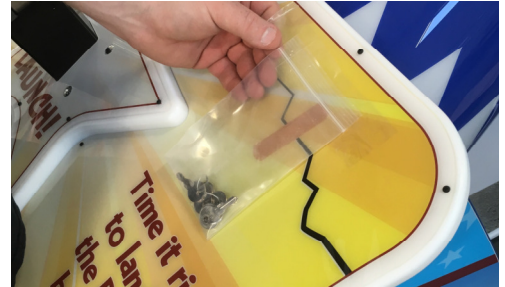

Unlock the front door using a H95 key.



Unlock the coin box door using a E00 key.




Remove the hardware kit and power cord from the coin box.




Close and lock coin box door, remove key to allow the front door to close fully.

WILLY CRASH GAME SETUP

Unlock and remove the back door using a H95 key.

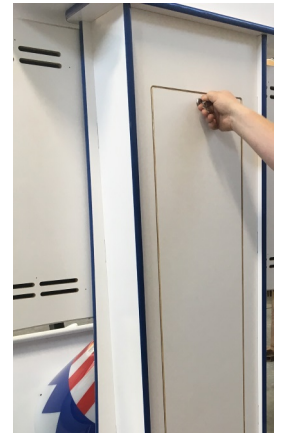

Route the power cord through the hole in the back of cabinet, and plug into the line filter inside the game.

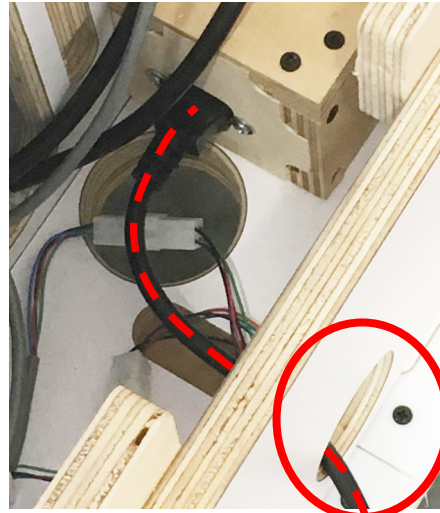


Replace the back door.

Peel the protective plastic film from the marquee artwork, and apply the bonus ticket value desired to the white outline as shown.



Using a ladder, position the marquee artwork on top of the game and secure using 8 of the black # 2 square drive screws from the hardware kit. (4 per side)

The artwork is notched to ease installation.

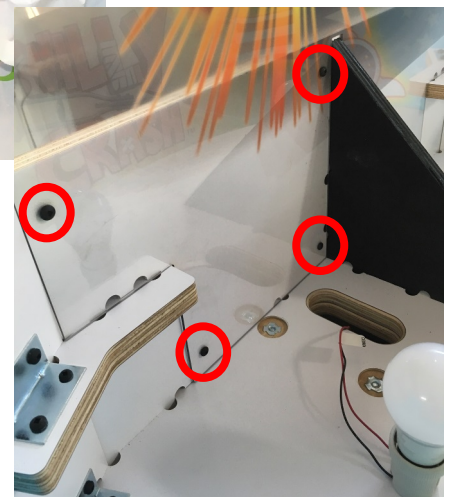

Power on game:

Open the front door and turn on the rocker switch on the power strip.

The game is now set up and ready for play!

Enter menu to adjust settings to your location specific price per play and ticket payout.

