




 


 

 



A6/V6-USD4

NOTE: Fun Stop Photos does not give change.
Accepting \$1 and \$5 bills, only, is recommended.

 = Fun Stop Photos default setting

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
	Reject US\$ 1	ON											
★	Accept US\$ 1												
	Reject US\$ 5		ON										
★	Accept US\$ 5												
	Reject US\$ 10			ON									
★	Accept US\$ 10												
	Reject US\$ 20				ON								
★	Accept US\$ 20												
	Reserved					ON							
★	Reserved												
	High Acceptance						ON						
★	High Security												
	Harness Disable												
★	Harness Enable							OFF					
	Inhibit Active High												
★	Inhibit Active Low								OFF				
★	1 pulse / one dollar												
	2 pulse / one dollar									ON	OFF		
	4 pulse / one dollar									OFF	ON		
	20 pulse / one dollar									ON	ON		
★	Pulse Speed	50ms on / 50ms off											
		60ms on / 300ms off										ON	OFF
		30ms on / 50ms off										OFF	ON
		150ms on / 150ms off										ON	ON

Note : (1) Reset the bill acceptor after setting the dip switch.

(2) SW7 and SW8 of the 8-switch DIP and the 4-switch DIP are for pulse protocol only.

See www.teamplayinc.com for Tech Support.