


## How to check clutch resistance


Step 1 - turn the game off using the power switch in the back of the game

Step 2 - open the upper back door to access the main board

Step 3 - locate the J4 connector on the main board and disconnect it from the board

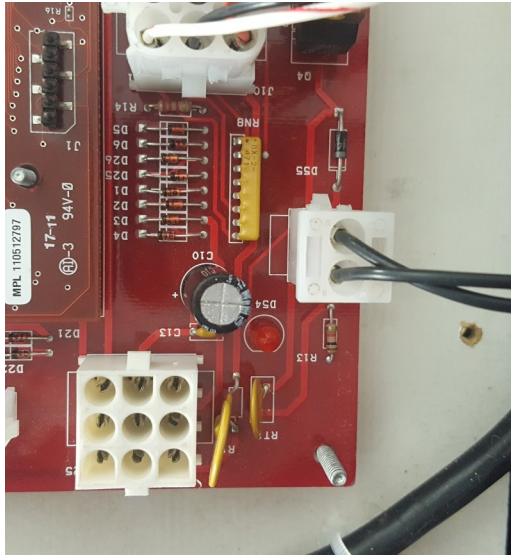

Step 4 - set your meter to Ohms ( $\Omega$ ) in the lowest setting (typically 200) and insert a probe into each pin

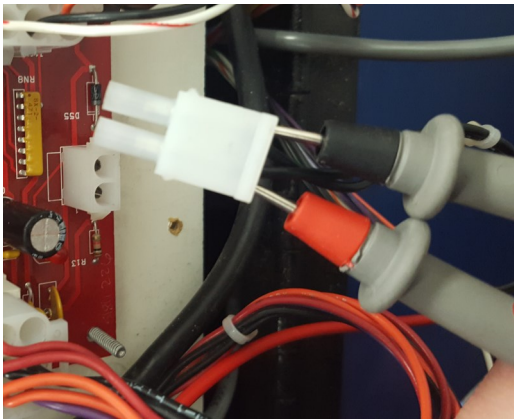

A good clutch will read 10 to 14 ohms

